




ANCASTER
FOOD EQUIPMENT


Instruction Manual
WASTEWATER DRAINAGE PUMP




Your Portable Sink

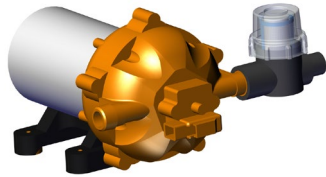

Water Drainage Pump

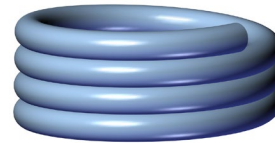

Nylon Flex Tube

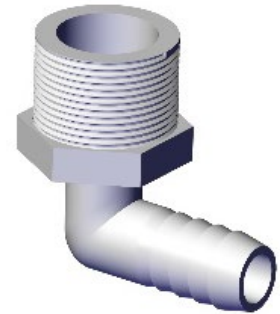

1/2" 90° Angle Valve

Equipment Required


Sold separately through Ancaster Food Equipment is a water drainage pump to meet all your elevated drain needs.

The drainage pump works by sucking the water flowing from the wastewater drainage valve and pumping it through a nylon flex tube.

This tube can be placed wherever you need the water to drain, for example: a bucket, tub or basin that is elevated off the ground.

This water drainage pump comes standard with 15ft of nylon flex tubing.

Note: Additional feet of nylon flex tubing can be purchased if needed. Please let your sales representative know how many feet you require.

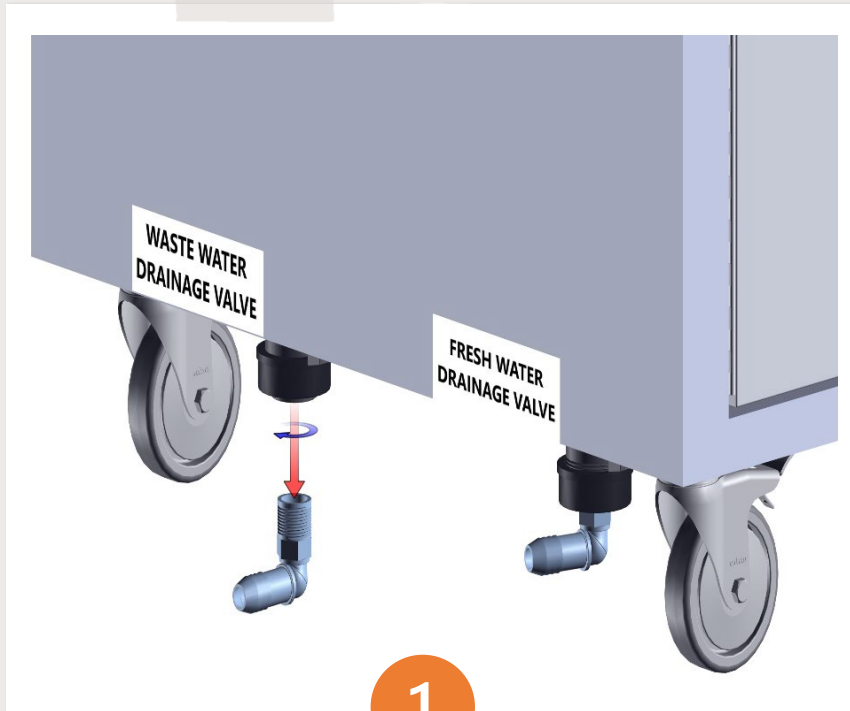

1

Begin by removing the plastic wastewater drain found under the sink by turning it in a clockwise direction.




2

Next, insert the $\frac{1}{2}$ " drain by turning it in a counter-clockwise direction.




3

Connect the garden hose to the new ½" drain and direct the opposite end towards the drain in your floor.

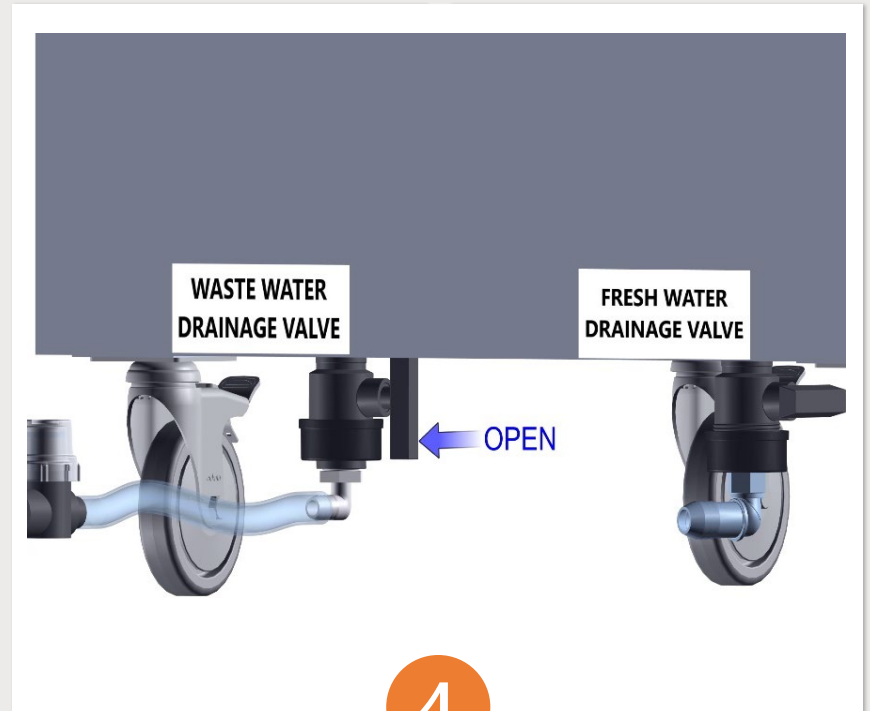

4

Turn the wastewater drainage valve switch to the open position and leave it open.

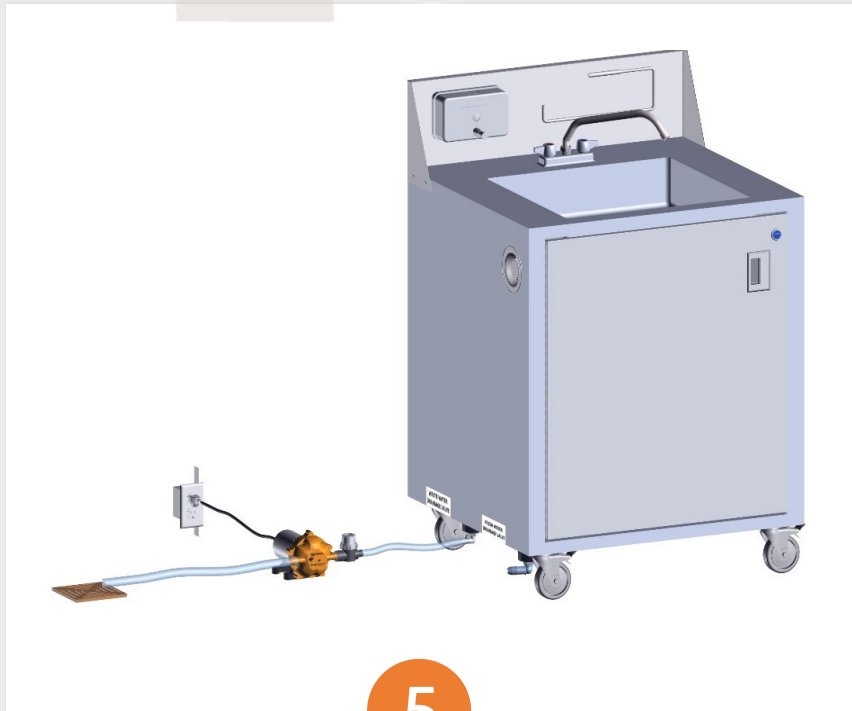

5

Once that is done, plug the water pump into the closest electrical outlet.



6

Water will immediately drain through the hose, towards the designated drainage area.